

---

# Index

## A

- accessing Configuration/Setup Utility program 4-8
- activity monitor option 4-23
- adapters, installing 3-7
- adapters, replacing 7-36
- add
  - drivers 2-2, 2-4
  - internal drive 3-9
  - memory modules 3-4
  - SBC options 3-4
  - system memory 3-4
- address conflicts 5-7
- administrator password option 4-16
- advanced power management option 4-22
- advanced setup option 4-18
- advanced video memory option 4-18
- air filters 4-2
- alternative drive bay, removal 7-39
- amplitude-shift keying (ASK) 6-8
- APM BIOS mode option 4-22
- application-specific drivers 4-24
- assignments, serial port 4-26
- automatic power management (APM) 4-23

## B

- backplane
  - connectors C-5
  - removing and replacing 7-53
- backplane parts 8-2
- backplane, removing and replacing 7-53
- battery failure error message 5-10
- battery, memory-retention 4-26
- battery, replacing 7-52
- beep symptoms 7-20
- beeps, POST 7-3
- BIOS level 7-2
- BIOS, updating 4-32
- blank screen 5-5
- boot error, hard disk 7-33
- broken cover lock 5-5
- bus card connectors C-5

## C

- C2 security 4-4
- cable connectors C-5
- cables
  - disconnecting 7-35
  - part numbers 8-9
- cables, connecting 2-2

- cache control option 4-19
- card
  - connectors C-5
  - hold-down spacers 3-8
- change
  - configuration information 4-7, 4-10
  - logical unit numbers 7-8
  - parallel port assignments 4-28
  - selected tests in test groups 7-9
  - serial port assignments 4-27
- channel assignments, DMA D-2
- chassis or cover intrusion 4-4
- check voltage range 2-1
- checkouts
  - beeps 7-20
  - display 7-18
  - general 7-11
  - keyboard 7-12
  - Module Tests Menu 7-6
  - no beeps 7-21
  - power supply 7-16
  - power-supply connections 7-17
  - printer 7-15
  - USB port 7-13
- code page 4-32
- color graphics adapter (CGA) 4-31
- color, high resolution 4-31
- command-line options 7-7
- communications 4-28
- component layout
  - 7581 Computer 1-2
  - SBC 6-2
- COMx settings (serial port) 4-27
- configuration
  - activity monitor 4-23
  - administrator password 4-16
  - advanced power management 4-22
  - advanced setup 4-18
  - APM BIOS mode 4-22
  - cache control 4-19
  - changing 4-7
  - conflicts 4-6
  - date and time 4-15
  - device change 5-13
  - DMA resources 4-21
  - drive security option 4-16
  - errors 4-6
  - Ethernet setup 4-18
  - hardware change 5-9
  - I/O port resources 4-21
  - interrupt resources 4-22
  - ISA legacy resources 4-20

- configuration (*continued*)
    - memory change 5-13
    - memory resources 4-20
    - overview 4-6
    - PCI control 4-19
    - plug and play control 4-19
    - power-on password 4-16
    - product data 4-10
    - ROM shadowing 4-19
    - start options 4-17
    - system security 4-15
    - system summary option 4-10
    - USB setup 4-18
    - utility program 4-7
    - video 4-32
    - video memory setup 4-18
    - viewing information 4-10
    - watchdog/thermal setup 4-19
  - Configuration/Setup Utility program
    - See also* configuration
    - activity monitor option 4-23
    - administrator password option 4-16
    - advanced power management option 4-22
    - advanced setup 4-18
    - APM BIOS mode option 4-22
    - cache control option 4-19
    - date and time option 4-15
    - description 5-1
    - devices and I/O ports option 4-11
    - DMA resources 4-21
    - drive security option 4-16
    - Ethernet setup 4-18
    - hard drive option 4-13
    - I/O port resources 4-21
    - IDE drives setup option 4-13
    - interrupt resources option 4-22
    - ISA legacy resources 4-20
    - main menu screen 4-9
    - memory resources option 4-20
    - moving around in the screens 4-9
    - PCI control option 4-19
    - plug and play control 4-19
    - power-on password 4-16
    - product data option 4-10
    - ROM shadowing 4-19
    - service procedures 7-1
    - start options 4-17
    - starting 4-8
    - system security option 4-15
    - system summary 4-10
    - USB setup 4-18
    - using 4-7
    - video setup option 4-13
    - watchdog/thermal setup 4-19
  - conflicts, eliminating assignment 5-7
  - connecting cables 2-2
  - connectivity E-16
  - connectors
    - backplane, model 001 C-5
    - bus card C-5
    - cable C-5
    - SBC 6-5
    - USB port 6-8
  - core voltage, processor 6-14
  - cover intrusion connector 6-10
  - cover intrusion detection 4-4
  - cover lock, broken 5-5
  - cover, remove 3-3
  - covers (FRUs) 8-6
- ## D
- data, transferring 4-28
  - date and time option 4-15
  - date and time, setting 4-15
  - detecting POST errors 5-1, 5-2
  - detection, cover intrusion 4-4
  - device configuration error 5-13
  - device drivers
    - adding 2-2, 2-4
    - application specific 4-24
    - device specific 4-24
    - installing 2-2, 2-4
    - overview 4-24
    - video 4-31
  - device drivers, downloading 7-2
  - device records A-1
  - devices and I/O ports option 4-11
  - devices, handling static-sensitive E-14
  - diagnostic
    - beep codes 7-20
    - command-line options 7-7
    - diskette 7-5
    - error messages 5-2, 7-4, 7-26
    - program 7-5
    - QAPlus/PRO program 7-5
    - starting diagnostic program 7-8
    - tests, extended memory 7-8
    - tools 5-1, 7-3
  - dimensions
    - See* physical dimensions
  - DIMMs, installing 3-4
  - direct memory access (DMA) channel
    - assignments 4-24, 4-25, D-2
  - disconnecting cables 7-35
  - diskette
    - diagnostic programs 5-3
    - Diagnostics 5-1
    - drive access 4-3
    - drive in-use lights 5-4
    - drive replacement 7-37

- diskette (*continued*)
  - parts 8-3
  - parts catalog 8-3
  - security option 4-16
  - starting the diagnostic program 7-8
  - update 4-32
- diskettes drives, security 4-16
- display
  - blank screen 5-5
  - checkout 7-18
  - distorted screen 5-5
  - error codes 5-2, 5-8
  - jitter 5-5
  - problems 5-5, 5-8
  - rolling screen 5-5
  - selecting 4-31
  - self-tests 5-4
  - support 4-32
  - SVGA 4-31
  - wavy screen 5-5
- display power management signaling (DPMS) 6-3
- DMA channel assignments 4-24, 4-25, D-2
- DMA resources option 4-21
- downloading programs 7-2
- DPMS
  - See display power management signaling (DPMS)
- drives
  - CD-ROM 8-3
  - diskette 8-3
  - diskette drive replacement 7-37
  - hard disk 4-13
  - hard disk (FRUs) 8-3
  - hard disk boot error 7-33
  - hard drive jumper settings C-2
  - in-use lights 5-4
  - installing external device 4-29
  - installing internal 3-9
  - replacing hard disk 7-38
  - security option 4-16
- dual inline memory modules (DIMMs) 3-4

## E

- EEPROM code, updating 4-32
- electrical safety E-10
- electronic emission E-16
- electrostatic devices, handling E-14
- emission, electronic E-16
- enhanced graphics adapter (EGA) 4-31
- environment 1-4
- error recovery timer 4-30
- errors
  - battery failure 5-10
  - beep symptoms 7-20
  - code format, POST 7-4
  - configuration 4-6

- errors (*continued*)
  - detecting POST 5-2
  - device configuration 5-13
  - diagnostic 5-9
  - hard disk boot error 7-33
  - memory configuration 5-13
  - message types 7-4
  - messages 5-2, 5-8, 5-9, 7-26
  - numeric codes 7-22
  - POST 4-7, 5-2, 5-9, 5-10
  - prompt 5-8
  - software 5-9
  - types of messages 7-4
- Ethernet access 4-3
- Ethernet setup option 4-18
- external serial devices, installing 4-27

## F

- fan (power supply) problems 5-5
- fan sense feature 4-5
- fan sense parts 8-5
- fans and filters parts 8-4
- feature cards, replacing 7-36
- field-replaceable units (FRUs)
  - backplane 8-2
  - cables 8-9
  - CD-ROM drive 8-3
  - covers 8-6
  - diskette drive 8-3
  - fan sense feature 8-5
  - fans and filters 8-4
  - floor-stand kit 8-8
  - hard drives 8-3
  - keyboards 8-9
  - mouse 8-9
  - numbers 8-1
  - panel-mount kit 8-8
  - parts catalog 8-1
  - power cord 8-10
  - rack-mount kit 8-8
  - removing
    - battery 7-52
    - memory modules 7-50
    - processor chip 7-47
    - SBC 7-44
  - SBC 8-2
- Flash (BIOS/VPD) update procedure 7-2
- Flash EEPROM, updating 4-32
- flash, verifying revision level 4-32
- flicker 4-31
- floor-stand dimensions B-2
- floor-stand kits, parts 8-8
- front fan, replacing 7-41

## G

- general checkout 7-11
- general problems 5-5
- general safety E-9
- graphics 4-31
- grounding requirements E-14
- guide, safety inspection E-13

## H

- handling static-sensitive devices E-14
- hard disk
  - bad sector 5-8
  - boot error 7-33
  - drive access 4-3
  - jumper settings C-2
  - parts 8-6
  - parts catalog 8-3
  - replacing 7-38
  - security option 4-16
  - testing 5-8
- hardware
  - diagnostic error messages 7-26
  - problems 5-1, 7-3
  - testing programs 5-1
- heat output 1-4
- high-resolution color 4-31
- hold-down, card spacers 3-8
- home page, Internet 7-2
- host-bus interface 6-3
- hub, USB port 4-30

## I

- I/O port resources option 4-21
- I/O ports, configuration information 4-11
- IBM SBC
  - See single-board computer (SBC)
- IDE drives setup option 4-13
- in-use lights 5-4
- indicator lights problem 5-5
- indicators, SBC 6-3
- industry-standard architecture (ISA)-bus adapters D-1
- infrared port (IrDA) 6-8
- inspection guide, safety E-13
- install
  - 7581 Computer 2-1
  - adapters 3-7
  - application programs 4-2
  - card hold-down spacers 3-8
  - device drivers 2-2, 2-4
  - drive shock mounting 3-12
  - external parallel devices 4-29
  - external serial devices 4-27
  - internal drive 3-9
  - internal options 2-2

- install (*continued*)
  - memory modules 3-4
  - options 3-1
  - parallel devices, external 4-29
  - RAM upgrade 3-4
  - SBC options 3-4
  - serial devices, external 4-27
- interface standard, serial IR 6-8
- intermittent problems 5-5
- internal drive, installing 3-9
- Internet address, program updates 7-2
- interrupt
  - and DMA assignments D-1
  - conflicts 5-7
  - request assignments 4-25, D-1
  - thermal monitor 4-30
  - watchdog timer 4-30
- interrupt resources option 4-22
- intrusion connector, cover 6-10
- ISA legacy resources 4-20
- ISA-bus adapters D-1

## J

- jumpers
  - location C-1
  - processor speed switches 6-13
- jumpers and switches, SBC 4-25

## K

- keyboard
  - checkout 7-12
  - problems 5-6
- keyboard part numbers 8-9
- keyboard problems 5-6
- keyboardless operation mode 4-4
- kits, installing memory upgrade 3-4

## L

- languages 4-32
- layout
  - 7581 Computer 1-2
  - SBC 6-2
- LED assembly, replacing 7-43
- LEDs 4-1
- lights
  - in-use 5-4
  - not working 5-5
- lithium battery 4-26
- lock for cover, broken 5-5
- logical unit numbers, changing 7-8

## M

- mass storage device configuration information 4-13
- MCGA (multicolor graphics array) 4-31
- memory
  - configuration error 5-13
  - diagnostic tests 7-8
  - installing RAM 3-4
  - replacing 7-50
  - SBC 6-2
- memory architecture, unified 6-3
- memory resources option 4-20
- memory setup option, video 4-18
- Memory Test Group 7-8
- memory-retention battery 4-26
- memory, adding 3-4
- menu, module tests 7-6
- messages
  - battery failure error 5-10
  - beep/blink patterns 7-4
  - device configuration error 5-13
  - diagnostic error 5-9, 7-4, 7-26
  - enter password prompt 5-2
  - error 5-2
  - memory configuration error 5-13
  - multiple 7-4
  - POST error 5-1, 5-2, 5-10, 7-4
  - software-generated 7-4
  - types of error 7-4
- miscellaneous connectors 6-10
- Module Tests Menu 7-6
- module tests selection 7-8
- module tests, running selected 7-9
- monitor, thermal/watchdog 4-30
- mounting 7581 Computer 2-2
- mouse part numbers 8-9
- mouse problems 5-6

## N

- no beeps 7-21
- notices E-1
- numeric error codes 7-22

## O

- on/off switch 4-1
- open
  - 7581 Computer 3-3
  - system unit 7-35
- operator information 4-1
- options
  - adding 3-1
  - installing shock mount 3-12
  - problems 5-7

- overview of 7581 Computer 1-1

## P

- panel-mount kits, parts 8-8
- parallel devices, external 4-29
- parallel port assignments 4-28
- parallel port mode, changing 4-29
- parts catalog 8-1
- parts warranty 8-1
- passwords
  - administrator 4-16
  - power-on 4-3, 4-16, 5-2, 5-6
  - prompt 5-8
  - removing 4-4
  - system administrator 4-3
- PCI control option 4-19
- physical dimensions
  - with floor-stand B-2
  - with rack-mount B-1
- pin assignments, serial port C-8
- plug and play control 4-19
- pointing-device problems 5-6
- port access, USB 4-3
- port assignment conflicts 5-7
- ports, configuring I/O 4-11
- POST
  - See power-on self-test (POST)
- power cord part numbers 8-10
- power supply
  - checkout 7-16
  - connections, SBC 7-17
  - fan problems 5-5
  - replacing 7-40
  - specifications 1-4, 4-1
- power switch
  - description 4-1
  - replacing 7-43
- power-on password 5-2, 5-6
- power-on password option 4-16
- power-on problems 5-2, 5-7
- power-on self-test (POST)
  - battery failure error 5-10
  - beeps 7-3
  - description 5-1
  - detecting problems 7-3
  - error 4-7
  - error detection 5-1, 5-2
  - error messages 5-2, 5-10
  - operation 5-1, 5-2
  - problem detecting 7-3
  - updating 4-32
- power, switching off 7-35
- printer
  - checkout 7-15
  - problems 5-8

## problems

- diskette drive 5-4
  - display 5-5
  - error prompt 5-8
  - fan 5-5
  - forgotten power-on password 5-6
  - general 5-5
  - hardware 5-1
  - hardware related 7-3
  - intermittent 5-5
  - keyboard 5-6
  - mouse 5-6
  - no beeps 5-5
  - occasional 5-5
  - options 5-7
  - overview 5-1
  - password prompt 5-8
  - pointing-device 5-6
  - power-on 5-2, 5-7
  - printer 5-8
  - screen distortion 5-5
  - screen jitter 5-5
  - screen roll 5-5
  - software 5-1, 5-9
  - solving 5-1, 5-2
  - troubleshooting charts 5-4
  - undetermined 7-33
  - user error 5-1
  - wrong number of beeps 5-5
  - wrong screen characters 5-5
- processor chip, removing and replacing 7-47
- processor voltage selection 6-14
- product data option 4-10
- program
- Configuration/Setup Utility 5-1
  - diagnostic 5-1, 5-3
  - navigation 7-6
  - power-on self-test (POST) 5-1
  - program, diagnostic 7-5
  - QAPlus/PRO 7-5
  - system 4-7, 4-32
  - test 7-5
  - utility 4-7

program updates, Internet address 7-2

## Q

QAPlus/PRO diagnostic program 7-5

## R

- rack-mount dimensions B-1
- rack-mount kit, parts 8-8
- RAM upgrade kits, installing 3-4
- range, voltage 2-1

records, device A-1

- remove and replace
- adapters 7-36
  - backplane 7-53
  - battery 7-52
  - diskette drive 7-37
  - fan sense board 7-42
  - feature cards 7-36
  - front fan 7-41
  - hard disk drive 7-38
  - LED assembly 7-43
  - memory modules 7-50
  - power supply 7-40
  - power switch 7-43
  - procedures for 7-1, 7-34
  - processor chip 7-47
  - SBC 7-44
- remove cover 3-3
- removing the system unit from its mounting 7-35
- replacement parts 8-1
- requirements, grounding E-14
- resolutions, video 4-31
- restore configuration 4-7
- revision level, verifying flash 4-32
- ROM (read-only memory) 4-32
- ROM shadowing 4-19
- run selected module tests 7-9

## S

### safety

- electrical E-10
  - general E-9
  - information E-9
  - inspection guide E-13
- scripting 7-8
- security features 4-3
- security option, drive 4-16
- selected module tests, running 7-9
- selected tests in test groups, changing 7-9
- self-tests, internal 5-1, 5-2
- sense fan, replacing 7-42
- sensor, temperature 4-30
- serial devices, external 4-27
- serial IR (SIR) standards 6-8
- serial IR standards 6-8
- serial port 4-26
- serial port assignments 4-27
- serial port pin assignments C-8
- service
- information 7-1
  - parts warranty 8-1
- service diagnostic program 7-5
- set date and time 4-15
- shadow ROM 4-19

- shock mount option, installing 3-12
- SIMMs, installing 3-4
- single-board computer (SBC)
  - component layout 6-2
  - connectors 6-5
  - features 6-1
  - indicators 6-3
  - installing 3-4
  - jumpers and switches 4-25
  - memory subsystem 6-2
  - memory upgrade 3-4
  - part numbers 8-2
  - parts catalog 8-2
  - power-supply connections 7-17
  - remove 3-4
  - removing and replacing 7-44
  - switch functions 6-12, C-7
  - updating flash EEPROM 4-32
  - video subsystem 6-3
- slow IR (SIR) standard 6-8
- software
  - errors 5-9
  - problems 5-1, 5-2
- solving problems 5-1
- spacers, card hold-down 3-8
- special characters 4-32
- specifications 1-4
- start
  - Configuration/Setup Utility program 4-8
  - diagnostic programs 5-3
  - system unit 5-2
- start options 4-17
- startup-sequence control 4-4
- static-sensitive devices, handling E-14
- stopping tests 7-10
- storage device, mass, configuration information 4-13
- SVGA
  - advantages 4-31
  - description 4-31
  - languages 4-32
  - software compatibility 4-31
  - special characters 4-32
  - video configuration 4-32
- switches
  - on/off 4-1
  - processor speed 6-13
  - SBC 6-12, C-7
- switching off power 7-35
- symptom-to-FRU index 7-19
- symptoms, beep 7-20
- symptoms, no beeps 7-21
- system memory, installing 3-4
- system memory, replacing 7-50
- system security option 4-15
- system summary option 4-10

## T

- test group, memory 7-8
- test groups, viewing 7-7
- test program, hardware 5-1
- test programs
  - diagnostic 7-5
  - using 7-5
- test scripts 7-8
- test the system unit 5-2
- tests menu, module 7-6
- tests, stopping 7-10
- thermal monitor 4-30
- time and date, setting 4-15
- timer, watchdog 4-30
- tools, diagnostic 5-1
- trademarks and service marks E-20
- transferring data 4-28
- troubleshooting charts 5-4

## U

- undetermined problems 7-33
- unified memory architecture 6-3
- universal serial bus (USB)
  - port checkout 7-13
  - port connector 6-8
  - ports 4-30
  - setup option 4-18
- update
  - flash EEPROMs 4-32
  - system programs diskette 4-32
  - system unit configuration 4-7
- update programs, downloading 7-2
- user error problems 5-1
- using QAPLus/PRO program 7-5
- using test programs 7-5
- utility program, Configuration/Setup 4-7

## V

- verifying flash revision level 4-32
- vertical-refresh rate 4-32
- video
  - configuration 4-32
  - device drivers 2-4
  - standards 4-31
- video connector 6-9
- video graphics subsystem 6-3
- video memory setup option 4-18
- video setup option 4-13
- vital product data code 7-2
- voltage range 2-1
- voltage selection, processor C-7
- voltage selection, processor core 6-14

## **W**

warranty service parts 8-1  
watchdog timer 4-30  
watchdog/thermal setup option 4-19  
Web site 7-2



---

# Readers' Comments — We'd Like to Hear from You

**IBM 7581 Computer (Passive Backplane)**  
**Installation, Operation,**  
**Hardware Maintenance**  
**Part Number 47L2511**

**Overall, how satisfied are you with the information in this book?**

	Very Satisfied	Satisfied	Neutral	Dissatisfied	Very Dissatisfied
Overall satisfaction	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

**How satisfied are you that the information in this book is:**

	Very Satisfied	Satisfied	Neutral	Dissatisfied	Very Dissatisfied
Accurate	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Complete	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Easy to find	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Easy to understand	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Well organized	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Applicable to your tasks	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

**Please tell us how we can improve this book:**

Thank you for your responses. May we contact you? ☐ Yes ☐ No

When you send comments to IBM, you grant IBM a nonexclusive right to use or distribute your comments in any way it believes appropriate without incurring any obligation to you.

\_\_\_\_\_  
Name

\_\_\_\_\_  
Address

\_\_\_\_\_  
Company or Organization

\_\_\_\_\_  
Phone No.



 
Fold and Tape

Please do not staple

Fold and Tape



NO POSTAGE  
NECESSARY  
IF MAILED IN THE  
UNITED STATES



## BUSINESS REPLY MAIL

FIRST-CLASS MAIL PERMIT NO. 40 ARMONK, NEW YORK

POSTAGE WILL BE PAID BY ADDRESSEE

International Business Machines Corporation  
Embedded Systems Development  
Department AXW, IMAD 2111  
1798 N.W. SPANISH RIVER BOULEVARD  
BOCA RATON FL 33431-9661



Fold and Tape

Please do not staple

Fold and Tape





Part Number: 47L2511



Printed in the United States of America  
on recycled paper containing 10%  
recovered post-consumer fiber.

47L2511

