

MAP 3300: Compact Printer

Symptom Explanation	Conditions That Could Cause This Symptom
You have entered this MAP because you received a 33XX error message, or you suspect a problem with the Compact Printer.	<ul style="list-style-type: none">• Improper power cord connection.• The power switch is set to Off.

001

- Ensure the printer power cord is plugged into a functioning, properly grounded electrical outlet.
- Power on the printer.
- Repeat the operation or diagnostic test that failed.

DID YOU RECEIVE A 33XX ERROR CODE, OR HAVE A PROBLEM WITH THE COMPACT PRINTER?

Yes No

002

Repeat the operation or diagnostic test to ensure the printer is functioning properly. If you suspect an intermittent problem, start an error log. If you need instructions, refer to the Reference manual.

003

Refer to the service manual for your printer to run further diagnostic tests.

Note: Be sure to run the tests for the printer adapter installed in the system before referring to another service manual.

Notes:

